

LUXOR | Plastic Utility Cart Assembly Instructions




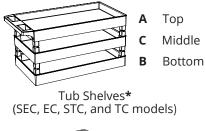


Flat Shelves* (BC, HE, HC, LE, LP, and WT models)



4" Standard Casters (All models except for ECHD and XLC)



5" Heavy-Duty Casters + Hardware (ECHD and XLC models)



Square Legs (WT, SEC, and EC models)





Round Legs (LE, LP, STC, TC, and BC models)



Fluted Legs (XLC and all models with cabinet pack)

REQUIRED TOOLS:






IMPORTANT:

If your cart includes options such as a power strip, pullout shelf, locking drawer, or locking cabinet, installation instructions for those components will be included in their packaging.


*NOTE:

Some BC, STC, and TC models come with a mix of flat and tub shelves.


ACCESSORIES (Not included): (For accessory installation, refer to instructions enclosed with each accessory.)



Cabinet Pack



Pullout Shelf + Hardware



3-Outlet Power Strip + Hardware





Locking Drawer + Hardware


WHAT'S IN THE BOX:

Part	Standard 2-Shelf	Standard 3-Shelf	Standard 4-Shelf	Standard 5-Shelf	Standard 6-Shelf	Heavy-Duty 2-Shelf	Heavy Duty 3-Shelf
Top Shelf (A)	1	1	1	1	1	1	1
Bottom Shelf (B)	1	1	1	1	1	1	1
Middle Shelf (C)	0	1	2	3	4	0	1
Locking 4" Caster (D)	2	2	2	2	2	0	0
Non-Locking 4" Caster (E)	2	2	2	2	2	0	0
Locking 5" HD Caster (F)	0	0	0	0	0	2	2
Non-Locking 5" HD Caster (G)	0	0	0	0	0	2	2
Allen Wrench (H)	0	0	0	0	0	1	1
Threaded Insert (I)	0	0	0	0	0	16	16
Threaded Screw (J)	0	0	0	0	0	16	16
Legs (K)	4	8	12	16	20	4	8


ASSEMBLY INSTRUCTIONS:


Standard Models


0

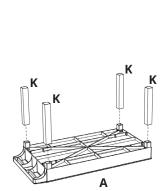


Heavy-Duty Models

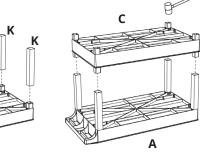

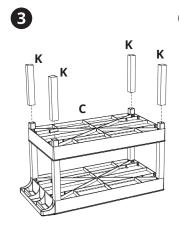

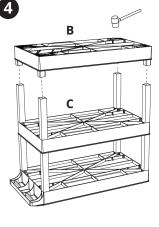


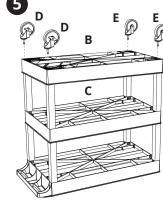






NOTE: Position locking casters (D) on the same end as the handle.


Flip unit upright after casters are securely installed.

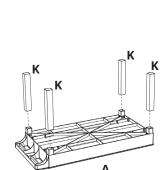


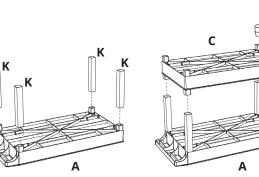

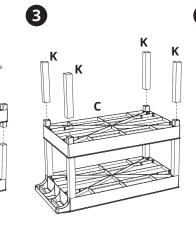


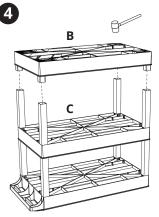

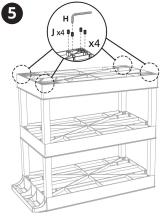


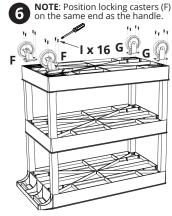



Flip unit upright after casters are securely installed.

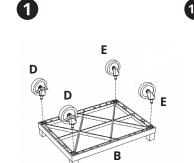



Cabinet Pack Models

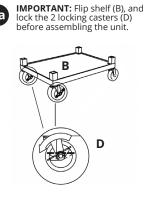

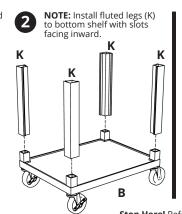

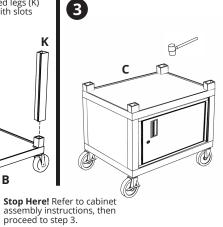

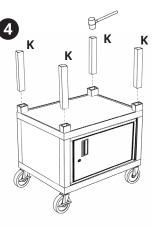

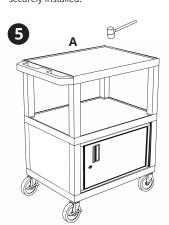

NOTE: Position the handle on the same end as the locking casters (D).