

USER MANUAL

UV Hot Towel Cabinet



Large

Mini



Legal Notice

The information provided in this document is intended for informational purposes only and is subject to change without notice. The information provided in this document should not be construed as a commitment by Earthlite*.

Earthlite* assumes no responsibility for the accuracy or suitability of the information contained in this document. This document may contain technical inaccuracies or errors. Earthlite* makes no expressed or implied warranties of any kind concerning the information contained in this document, including, but not limited to, the implied warranties of merchantability and fitness for purpose.

Earthlite* shall not be liable for incidental or consequential damages in connection with or arising out of the product, performance, or use of this document and the information and material it describes.

© Copyright 2020 Earthlite®

All rights reserved. This document or any portion thereof may not be reproduced in any way, including photocopying or translation to another language without the prior written permission from Earthlite.

Earthlite[®] is a registered trademark of Earthlite, LLC.

Introduction

The Earthlite UV Hot Towel Cabinet is a simple and convenient way to quickly heat towels and keep them within an easy arm's reach. The contemporary design fits with any decor, and the 3 available sizes allow for different capacity needs. Warm, moist towels are a wonderful addition to a variety of spa treatments.

This product is intended for use in a professional spa, massage studio, or similar commercial environment. While no special training is needed to operate it, for safety reasons it is important that the instructions contained in this manual are reviewed in detail before the first use. This manual should be read in its entirety by each professional who will be operating the product to ensure the safety of both operator and client. This manual should be saved for future reference.

The UV Hot Towel Cabinet should not be used in any other manner than described in this manual. Please read, understand, and follow all safety warnings, labels, and instructions. Misuse, use of unnecessary force, or using the hot towel cabinet for unintended or unauthorized procedures can result in injury to operator, client, and/or equipment.

Detailed instructions for use and maintenance can be found in this user manual. If you have further questions, please contact us at (800) 872-0560 for US customers, or (760) 599-1112 for international customers. We can also be reached via e-mail at info@earthlite.com

Table of Contents

Section 1: Safety Instructions	
Safety Symbols	2
Warnings	2
General Precautions	3
Section 2: Product Overview	
Basic Specifications	4
Product Diagram	4
Section 3: Operating Instructions	
Power Switch & Indicator Light	5
UV Lamp Switch	5
UV Hot Towel Cabinet Operation	5
Operating Guidelines	5
Section 4: Care & Maintenance	
Cleaning Instructions	6
Ongoing Maintenance	6
Troubleshooting	7
Warranty Information	7
Certifications	7
Contact Usback cove	er

SECTION 1: SAFETY INFORMATION

Safety Symbols

Familiarize yourself with the following Safety & Warning symbols. They are designed to prevent damage and injury to you, your clients, and your new Earthlite product.

IMPORTANT: The important safety instructions and warnings in this manual cannot cover all possible problems and conditions that can occur. Use common sense and caution when installing, operating, or maintaining this appliance.



Indicates an imminently hazardous situation which could result in serious or fatal injury.



Indicates a potentially hazardous situation which could result in serious injury.



Indicates a potentially hazardous situation which could result in equipment damage and/or injury.

IMPORTANT SAFETY INSTRUCTIONS - FOR COMMERCIAL USE ONLY

Read all instructions before using this product.



RISK OF ELECTRIC SHOCK, FIRE, AND EXPLOSION

Do not store or use flammable or explosive vapors and liquids inside or in the vicinity of this or any other appliance. Keep items that could explode, such as aerosol cans, away from the warming drawer. Do not store flammable or explosive materials in adjacent cabinets or areas.

Always unplug the hot towel cabinet from the electrical outlet before cleaning.



NEVER use this hot towel cabinet as a space heater to heat or warm a room.


DO NOT use water on a grease or electrical fire - smother fire or flame or use dry chemical or foam-type extinguisher.

POWER SUPPLY (North America): 110V AC grounded POWER SUPPLY (International Versions): 220V AC grounded

Electrical limitations: Do not use an extension cord with this product - plug directly into grounded outlet. This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER: Improper connection of the equipment-grounding connector can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

NORTH AMERICA ONLY



This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch (A). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

INTERNATIONAL VERSIONS ONLY

This product is for use on a nominal 220V-240V circuit and has a grounding plug (plug type varies by country). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

READ AND SAVE THESE INSTRUCTIONS

WARNING

GENERAL SAFETY PRECAUTIONS


WARNING: To reduce risk of fire, electric shock, serious injury, or death when using this appliance, follow basic precautions, including:

- Read this manual completely before operating this appliance.
- Use this appliance only for its intended use as described in this manual.
- Ensure the recommended heating instructions are followed (See Operating Instructions).
- This appliance is only to be used as a warmer for moist towels. This appliance is not a microwave or dryer.
- Towels are only to be moistened with plain water. Do not add corrosive, citrus-based or potentially flammable liquids.
- Ensure the supplied wire rack is always used when warming towels.
- Exercise caution when opening the drawer allow hot air and/or steam to escape before looking or reaching into the drawer.
- Ensure the towels are not too hot before picking up with a bare hand use tongs if needed.
- Ensure the towels are an appropriate temperature before placing on a client's skin.
- Do not install or operate a product that is damaged, has a damaged power cord or plug, or is malfunctioning in any way. Call customer service immediately for evaluation.
- Do not repair or replace any part of the hot towel cabinet unless specifically recommended in this user manual. All other service should be done by a qualified technician.
- Use of accessory attachments not recommended by the manufacturer may cause injuries.
- Before cleaning or performing any type of service, ensure that the hot towel cabinet is disconnected from the electrical outlet, and the cabinet is completely cool.
- Keep the electrical cord away from heated surfaces.
- DO NOT TOUCH ANY HOT SURFACES IN OR ON THE HOT TOWEL CABINET DURING OR IMME-DIATELY AFTER USE. After use, allow sufficient time for the surfaces to cool before touching them.
- To avoid the possibility of fire or burns, do not allow clothing or other material to come into contact with any part of the hot towel cabinet during and immediately after use. Use caution if wearing loose or hanging apparel while using this appliance.
- Never use a power cord that is frayed or damaged.
- Ensure the power cord does not create a tripping hazard.
- Never immerse the power cord or plug in water or other liquid.
- If materials inside the warming drawer ignite, keep the door closed and shut off the power at the circuit breaker panel or fuse box.
- If you observe any abnormal conditions during use, such as abnormal noise, smell, temperature rising, smoking, etc., keep the door closed and shut off the power at the circuit breaker panel or fuse box.
- Do not put any sealed containers inside the drawer they may explode when heated, causing injury.
- Properly clean and maintain the unit regularly as instructed in this manual. Clean only those parts listed in this manual, in the manner specified.
- Do not use abrasive scrubbers or abrasive/caustic cleaners or detergents. They may permanently
 damage the finishes. Do not use aerosol cleaners, because they may be flammable or cause corrosion of metal parts.
- Make sure the hot towel cabinet is used only by trained and capable individuals.
- Do not tamper with the controls.
- Preheat the warming drawer before use.
- Never allow anyone, including children, to sit, stand or climb on any part of the unit, including the door
 when open. Do so may cause tipping, damage, serious injury, or death.
- Do not leave children alone or unattended in the area around the hot towel cabinet. Do not allow children to operate it, play with the controls, pull on the handle, or touch other parts.
- Do not store items of interest to children above the hot towel cabinet. Children could be burned or injured if climbing on the appliance.
- Do not overstuff the hot towel cabinet see Operating Instructions for recommended capacity.

READ AND SAVE THESE INSTRUCTIONS

SECTION 2: PRODUCT OVERVIEW

Sizes	Mini	Standard	Large
Product Image		a sublem	O O Otania
Exterior Dimensions	10"H x 13.5"W x 11"D	14"H x 17.5"W x 11.5"D	17.5″ H x 16″W x 16.5″D
Interior Dimensions	5.5"H x 10"W x 7"D	10"H x 14.5" x 7"D	6"H x 13"W x 12"D (per section)
Models	Black/Silver (120V) White/Silver (120V)	Black/Silver (120V) White/Silver (120V) White/Silver (220V)	White/Silver (120V)
Product Weight	8.8 lbs	13.2 lbs	22 lbs
Power	120VAC / 60Hz	120VAC / 60Hz or 220VAC / 50Hz	120VAC / 60Hz
Input	130 Watts	180 Watts	360 Watts
Capacity	8L (appx. 24 wet 12"x12" washcloths)	18L (appx. 72 wet 12"x12" washcloths)	32L (appx. 128 wet 12"x12" washcloths)
Warming Temperature	158°-175°F (70°-80°C)	158°-175°F (70°-80°C)	158°-175°F (70°-80°C)

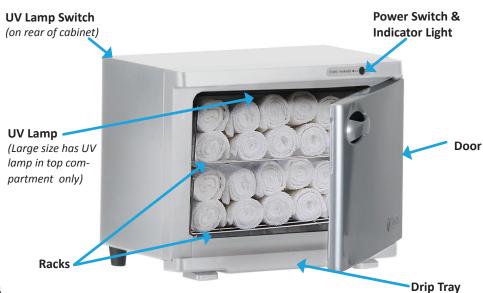


SECTION 3: OPERATING INSTRUCTIONS

Power Switch & Indicator Light



UV Lamp Switch

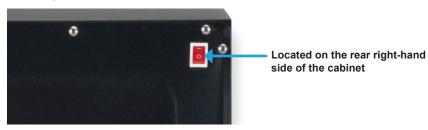

UV Hot Towel Cabinet Operation

- 1. Plug in the hot towel cabinet
- 2. Press the power switch to the ON position (indicator light will light up)

NOTE: The Large size unit has 2 power switches and 2 indicator lights, one for each compartment

- 3. Ensure the door is closed securely to heat quickly and maintain temperature
- 4. If desired, press the UV lamp switch to the ON position

NOTE: The UV lamp temporarily turns off when the door is opened

- 5. When done using the hot towel cabinet, turn the power switch and UV lamp to the OFF position
- 6. Remove any remaining towels
- 7. Clean the hot towel cabinet according to the instructions on page 6

NOTE - INITIAL HOT TOWEL CABINET OPERATION

You may notice an odor from the hot towel cabinet the first few times it is used. This is normal and will lessen with use. To speed up the process, we recommend initially turning on the empty unit for several hours before filling with hot towels for the first time.

Operating Guidelines

- For best results, pre-moisten towels with hot water.
- Recommend preheating the empty hot towel cabinet for 20 minutes before placing towels.
- Warming times vary depending on the starting temperature of the towels, how wet the towels are, and the temperature of the room.
- Do not overfill the heating chamber.
- Always ensure the door(s) are closed securely when placing or taking out towels.
- Use caution when opening the cabinet door hot steam may escape.

SECTION 5: CARE & MAINTENANCE

Cleaning & Ongoing Maintenance



RISK OF ELECTRIC SHOCK

Always unplug this furnishing from the electrical outlet before cleaning.



DO NOT USE acetone, "Armor All" type cleaners, citrus-based cleaners, or industrial cleaners. These can seriously damage the appliance. Such damage would not be covered under warranty.

Category	Cleaning Recommendation	
Electronics/ Control Panel	Anti-static electronic aerosol dusters can be used to keep the surfaces of elec- tronic components, power cables, and plugs free of dust. Exercise caution to avoid introduction of liquids onto any buttons. Do not use abrasive cleaners or scrubbers. They may permanently damage the finish or damage the letters and/or graphics.	
Cabinet Exterior	Clean the drawer face/handle with a solution of mild detergent and hot water. Rinse and dry with a soft cloth.	
Cabinet Interior	Interior Clean the cabinet interior with a solution of mild detergent and hot water. Rinse and dry with a soft cloth. Do not use any flammable cleaners inside the cabinet.	
Gasket	The gasket is located around the edge of the door. Gently clean the gasket with a solution of mild detergent and hot water. Rinse and dry with a soft cloth. The gasket material is soft, so be careful not to crush or damage it. Damaging the gasket will cause a poor heat seal and result in poor warming drawer performance.	

When heating moist towels, condensation can build up inside the cabinet. If not regularly wiped down, this can lead to small amounts of water dripping from the cabinet when opened.

To minimize any water dripping, ensure you perform the following maintenance tasks as needed throughout the day:

1) Ensure any condensation and/or moisture (inside and outside the cabinet) is wiped dry with a soft cloth as needed.

2) Regularly check and wipe down the drip tray.

Troubleshooting

This helpful troubleshooting guide will provide you with information about how to recognize a problem with the hot towel cabinet, determine possible causes, and find a solution.

In the event your specific situation is not covered in this guide, please contact Earthlite so our technical support department can assist you. Beyond the troubleshooting guide below, do not attempt to repair the hot towel cabinet yourself. This can void your warranty.

Unauthorized service will not be covered. Please be sure to contact Earthlite Customer Service first. Earthlite Customer Service: (800) 872-0560, (760) 599-1112 Int'l

Problem	Solution
Nothing works	 Plug into a grounded and dedicated electrical outlet. Check the circuit breaker panel or fuse box for a tripped breaker or blown fuse.
Excessive condensation	 Preheat the warming drawer before each use. Pre-moisten the towels with hot water for best results.

Warranty Information

Earthlite offers a 1 (one) year warranty on the UV Hot Towel Cabinet. Normal wear and tear, and costs associated with maintenance procedures, and damage caused by accident, misuse, improper maintenance, harsh operating environments or neglect are not covered under this warranty.

All warranties are limited to repair or replacement, at Earthlite's discretion, shipping not included. Proof of purchase is required to obtain RMA (Return Material Authorization) and customers may be required to return defective items. International customers are responsible for all associated return costs (inbound and outbound), as well as any applicable duties and taxes.

Certifications



Certified to: UL 499 CAN/CSA C22.2 No. 94-10 File number: E471157



Certified to: EN-60335-1 EN-60335-2-49 EPA Establishment No: 98204-CHN-1



Contact Us

Earthlite 990 Joshua Way Vista, CA. 92081 (800) 872-0560 (760) 599-1112 Int'I (760) 477-6071 fax info@earthlite.com Hours of operation:

Monday - Friday 8:00 a.m. to 5 p.m. PST

Saturday - Sunday Closed

Visit us online at: earthlite.com





Follow us on Twitter



Follow us on Instagram

